



MCD4 operations manual

A Comfort Heat floor heating system has been installed in your floor. Under floor heating will warm from the floor up giving you unparalleled feeling of comfort. This heating system is controlled by an electronic thermostat that has a floor sensor for optimum temperature control.

PRIOR TO TURNING ON

The sub-floor and screed have to be fully cured before turning the heating on. For sand & cement screeds you must wait at least 3 weeks before turning on. When turning on the floor for the first time, increase the floor temperature gradually over 2-3 days.


WARRANTY

TILE - 10 years
CARPET - 5 years
TIMBER - 5 years
SLAB - 10 years
THERMOSTAT & SENSOR - 2 years

TEMPERATURE SETTINGS

TILE: 24 -26°C max. temp 30 deg °C
CARPET: 25°C max. temp 28°C
TIMBER: max. temp 27°C
SLAB: max. temp 27°C
THERMOSTAT & SENSOR: 2 years

The MICROTEMP RANGE of electronic thermostats are specifically designed for underfloor heating systems. The thermostats are vertically flush mounted and have a 2pole isolator with 16A output relay.

MCD4 - The MCD4 thermostat has a built in programmable time-clock to automatically turn the floor heating system ON and OFF at selected times. During the OFF periods the floor does not turn OFF but programs the floor temperature to your selected 'set back temperature'. When the  appears on your screen, the floor is heating. If you see 'E1' or 'E2' there is an error.



MCD4

TECHNICAL DATA

Supply Voltage: 240Vac, 50/60hz
Output Relay: 16A SPST, 3600W max
Switching Differential: 0.4 degC
Built-in Switch: 2 pole 16A
Temperature Range: 0/+50 degC
Housing/protection: IP20 & IP21
Dimensions (HxWxD): 115mm x 84mm x 58mm
Sensor Length: 3m
Mounted: Vertically/Flush Mounted



TURNING ON FOR THE FIRST TIME [Factory Reset]

>Press 'MENU' button
>Press the 'Arrow' button until you see 'Engineer Settings' > Press OK
>Press the 'Arrow' button until you see 'Factory Reset' > Press OK
>Press the 'Arrow' button until you see 'RESET' > Press OK
The thermostat will turn off and on.
Set language>OK Set time>OK Set date>OK
The thermostat is now set to 'factory default' settings and is fully operational in auto mode. Default settings can be changed as detailed below.

PROGRAMMING

>Press 'MENU' button
>Press the 'Arrow' button until you see 'User Settings' > Press OK
>Press the 'Arrow' button until you see '4-Event Schedule' > Press OK
>Select from either 5:2 6:1 or 7:0 > Press OK > Press Exit

>Press 'MENU' button
>Press the 'Arrow' button until you see '4-Event Schedule' > Press OK
>Set day(s) of the week> Press OK
>Set Morning > Press OK
>Press the 'Arrow' button to set Morning 'ON' time > Press OK
>Press the 'Arrow' button to set Morning 'ON' temperature > Press OK
>Set Daytime > Press OK
>Press the 'Arrow' button to set Daytime 'OFF' time > Press OK
>Press the 'Arrow' button to set Daytime 'OFF' temperature > Press OK (normal setting is 20°C - do not set to 0°C)
>Set evening > Press OK
>Press the 'Arrow' button to set Evening 'ON' time > Press OK
>Press the 'Arrow' button to set Evening 'ON' temperature > Press OK
>Set Night > Press OK
>Press the 'Arrow' button to set Night 'OFF' time > Press OK
>Press the 'Arrow' button to set Night 'OFF' temperature > Press OK (normal setting is 20°C - do not set to 0°C)
Repeat the process depending on your weekly configuration

MANUAL MODE SETUP

Override of the auto on /off programmed setting.
>Press 'MANUAL' button
>Set temperature> Press OK - Hand will appear with set temperature
To change the thermostat back to automatic mode - press the 'AUTO' button

COMFORT MODE

Comfort mode will temporary override auto settings for a single length of time.
Once the time expires the thermostat will revert to the auto programmed setting.
>Press 'COMFORT' button
>Set temperature > Press OK
>Set length of time > Press OK

Factory Default settings:
weekdays (day 1-5):
 on at 6am - 25°C
 off (set back) at 8am - 20°C
 on at 4pm - 25°C
 off (set back) at 10.30pm - 20°C

week - ends (day 6-7):
 on at 8am - 25°C
 off (set back) at 11pm - 20°C

note: thermostat does not "tun off" but changes to a "set back" temperature. This set back temperature can be changed.

Understanding Adaptive Function? ** IMPORTANT FOR IN SLAB INSTALLATIONS **

Adaptive function allows the thermostats to predict when the floor heating should be turned on. A thermostat set to 28°C at 6am will begin to turn on hours before (based on the last few days temperature) in an attempt to be at 28°C at 6am

Time of use meter

The Smart Power Meter varies the power tariff rate at different times of the day. Overnight the rate is at 'Off Peak' rates and during the afternoon and evenings there is the 'Peak' rate. At the times between these there are 'Shoulder' rates. The exact times of these rates should be confirmed from your power provider.
As the cost of electricity during 'Peak' times is more expensive than during the 'Off Peak' or 'Shoulder' times the adaptive function on the MCD4 thermostat should be programmed to 'OFF'.

Benefits of Adaptive Function (non inslab installations)

As the weather becomes cooler, your thermostat will predict what time to turn on your system so your floors will always be warm and at your set temperature, as programmed.

Set the Adaptive Function to 'Off' (default setting for MCD4 is 'ON')

>Press MENU button
>Press the 'Arrow' button until you see 'Engineer Settings' > Press OK
>Press the 'Arrow' button until you see 'Adaptive Function' > Press OK
>Press the 'Arrow' button until you see 'OFF' > Press OK

67033 01/10 (DJU)
© 2010 OJ Electronics A/S



Type MCC4/MCD4

English

Contents

Introduction	1	Engineer settings	3
First time settings	1	Offset temperature.....	3
General operation	2	Adaptive function.....	3
Back.....	2	Application.....	3
Exit.....	2	Temperature scale	3
Operation mode	2	Language.....	3
Auto mode	2	Factory reset.....	3
Manual mode	2	Information	3
Comfort mode	2	Back.....	3
Thermostat setup menus	2	Exit.....	3
4-event settings	2	Error messages	3
User settings	2	Factory settings	3
Time and date	2	Preset schedule.....	3
Child lock	2		
Display settings	2		
4-event schedule	2		
Energy monitor	3		

Introduction

The thermostat can switch on your heating system at predetermined times on different days of the week. For each day of the week, you can set individual temperatures for 4 different periods, called events. Lowering the temperature when the home is unoccupied will reduce your energy costs without reducing comfort.

The thermostat comes with a default schedule suitable for most homes. Unless you change the settings, the thermostat will operate in compliance with the default schedule.

Furthermore, the thermostat features an adaptive function that automatically changes heating period start times so as to ensure that the required temperature is reached at the set time. After three days the adaptive function has learned when the heating must be switched on.


First time settings

The first time you switch the interrupter ON "I", language, time and date must be set. The menu will automatically guide you through the process.

- Choose your language with the Up and Down buttons and confirm with **OK**.

- Set the actual hour and press the **OK** button. Then set the minutes. Press **OK**.
- Set the actual date: year, month and day. Confirm the settings with the **OK** button.

The thermostat is now ready for use and will control your heating in accordance with the pre-programmed 4-event schedule, see **Factory settings**.

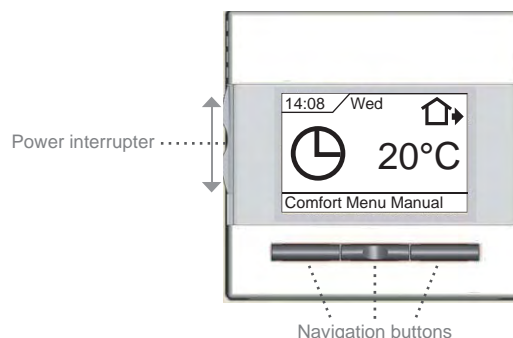

General operation

The interrupter button allows you to turn the thermostat on “1” and off “0” by sliding the button up and down. When the thermostat is switched off “0”, the relay disengages. All settings, including time and date, will be remembered.

The thermostat is intuitively operated using the navigation buttons. The function of each button is indicated above the button in the display.

Back

In various parts of the menus and submenus you will find the **Back** menu item.

Use **Back** to return to the last step.

Exit

Returns to initial display.

Operation mode

The thermostat features three different modes of temperature control:

Auto mode

☰ Select Auto if you want the temperature to be controlled automatically via the 4-event schedule.

Manual mode

☞ Select Manual to cancel the programmed 4-event schedule (e.g. during holidays) and to set the required temperature manually. You may, for example, want to adjust the temperature to 5°C for frost protection while you are away.

- Press **Manual**, confirm with **OK** and choose the required temperature.

Comfort mode

☞ Select Comfort to set a temporary comfort temperature (so-called party mode) for a single event.

- Press **Comfort**, confirm with **OK** and choose the required temperature. Then enter the required duration of comfort mode.

After the set time has elapsed, the thermostat will automatically revert to **Auto mode**.

Please note: Comfort mode is a temporary manual setting that will be automatically cancelled by the next event in the programmed 4-event schedule.

Thermostat setup menus

The menu allows you to select the following options:

4-event settings


Allows you to have the temperature controlled automatically in accordance with a program of your own choice. You can select temperature settings for four different events during the day:

☀ When you wake up in the morning

🏠➡ When you are away at work



🏠← When you come home

🌙 When you go to bed at night

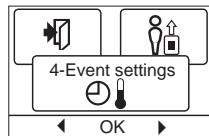

The thermostat is pre-programmed with a 4-event schedule for easy and economic heating control, see **Preset schedule** under **Factory settings**. The schedule can be easily changed in the following way:


1. Press the **OK** button to activate the 4-event settings display.
2. Choose the days for which you want to change the settings, **Mon-Fri** or **Sat-Sun** using the up or down button. Press **OK**.
3. Now select the time and temperature for each daily event in the program. Press **OK** and set the start time for the event concerned. Confirm with **OK**. Set the temperature for this event and confirm with **OK**.
4. After setting the required events, select **Exit** in the menu to return to the initial display.

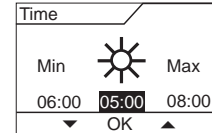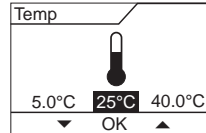

User settings

In the user settings menu you can change the following items:


- Time and date
- Child lock
- Display settings
- 4-event schedule
- Energy monitor

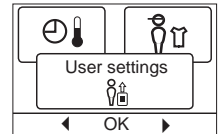

Time and date

Press **OK** and set the actual time in hours and minutes.

The date will then be displayed. Set the date and confirm with **OK**.

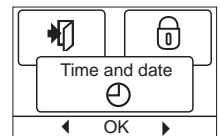


Child lock

Allows you to lock the thermostat settings, e.g. in public or other places where you do not want the settings changed.

Press **OK** and set the child lock to **On** using the down button. Confirm with **OK**.

The child lock can be unlocked by pressing both the **Comfort** and **Manual** buttons simultaneously for 5 seconds.

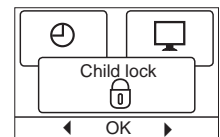

Display settings

Allows you to select what is shown on the initial display.


Time/day: Shows the actual time and day at the top of the display.

Set temp.: Shows the current temperature setting.

Act. temp.: Shows the actual measured temperature.

Scr. saver: Switches off the display after 30 seconds if no button is pressed. Any subsequent press of a button reactivates the display. The thermostat remains on and runs the selected program.

Press the OK button to select or deselect the display options. Then select **Exit** in the menu to return to the initial display and view your chosen settings.

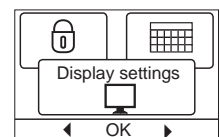

4-event schedule


Allows you to choose the type of weekly 4-event schedule you require.

5:2 : Monday to Friday with 4 events and Saturday to Sunday with 2 events.

Typically used if you work from Monday to Friday.

6:1 : Monday to Saturday with 4 events and Sunday with 2 events. Typically used if you work from Monday to Saturday.

7:0 : Monday to Sunday with 4 individual events. Allows you to choose individual programs for each of the 7 days of week.

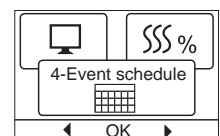


Select the required 4-event schedule and confirm with **OK**.
For instructions on programming the time and temperature for the 4-event schedule, see **4-event settings**.

Energy monitor

Allows you to view energy consumption for the past 2 days, 30 days or 365 days.

Press **OK** for the chosen period. The value in per cent (%) shows the relative amount of time the heating has been on. The following figure is the cost for the selected period. To ensure correct calculation, check the settings for currency, price per kWh and load.

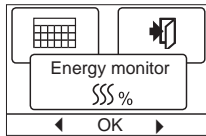

- Currency: Press **OK** and chose the required currency. Confirm with **OK**.
- Cost/unit: Press **OK** and set the actual cost of electricity. The cost must be entered per kWh. Press **OK**.
- Load: Press **OK** and enter the connected heating power. The value must be in watt (W). Press **OK**. Leave the menu by pressing **Exit**.

Engineer settings


The Engineer settings menu contains the following options:

- Offset temperature
- Adaptive function
- Application
- Temperature scale
- Language
- Factory reset
- Information

Offset temperature

If the actual measured temperature does not corresponding to the thermostat value, you can adjust the thermostat by offsetting the temperature.


Press **OK** and enter the value of the measured temperature. Confirm with **OK**.

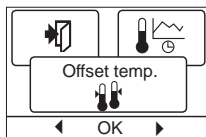

Adaptive function

Ensures that the required temperature has already been reached when you get up in the morning or come home from work. After just a few days, the adaptive function will have automatically calculated when the heating must be turned on.

Press **OK** and set the function to **On**. Confirm with **OK**.

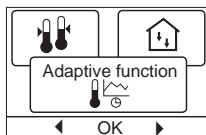


Application

Set the type of regulation used.


There are 3 options:

- Floor reg. :** The thermostat regulates floor temperature only. A floor sensor must be connected.
 - Room reg. :** The thermostat regulates room temperature only.
 - Room/limit :** The thermostat regulates room temperature with min. and max. limits for floor temperature. A floor sensor must be connected.
 - Regulator :** The thermostat functions as a simple regulator and no sensors are used. The setting is a percentage.
- Press **OK** and select the required application. Confirm with **OK**.

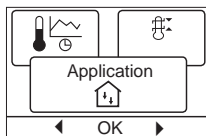

Temperature scale

Allows you to set the temperature range within which the thermostat can be set. It is then only possible to set a temperature within this range in auto, comfort and manual mode.

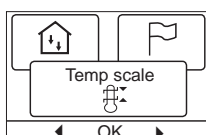


Press **OK** to highlight **Min** temperature. Use the up or down button to select the minimum permissible temperature. Press **OK** and select the maximum permissible temperature. Confirm the settings with **OK**.

Language

Allows the language used on the display to be changed.


Press **OK** and select the required language. Confirm with **OK**.

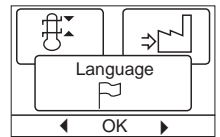

Factory reset


Allows factory settings to be restored. Your personal settings will be lost, see **Factory settings**.

Press **OK** and choose **Reset** in the menu. Confirm with **OK**.

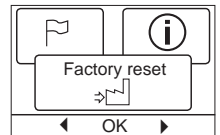

Information

Displays the thermostat software version.

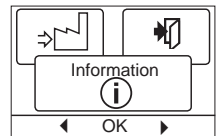

Back

In various parts of the menus and submenus you will find the **Back** menu item.

Use **Back** to return to the last step.

Exit

Returns to initial display.

Error messages

If a fault or error occurs, the thermostat will display an error code as follows:

- E0: Internal failure. The thermostat is defective. Replace thermostat.
- E1: Internal sensor defective or short-circuited.
- E2: External sensor defective or short-circuited.
- E5: Internal overheating. Inspect the installation.

Factory settings

Preset schedule

Day 1-5			
Event	Time	With floor sensor	With room sensor
Day	06:00-08:00	25°C	20°C
Out	08:00-16:00	20°C	15°C
Home	16:00-22:30	25°C	21°C
Night	22:30-06:00	20°C	15°C
Day 6-7			
Event	Time	With floor sensor	With room sensor
Day	08:00-23:00	25°C	21°C
Night	23:00-08:00	20°C	15°C

INSTRUCTIONS

Typ MCC4/MCD4



67032 01/10 - (DJU)

English

The thermostat is an electronic on/off thermostat for temperature control by means of an NTC sensor located either externally or internally within the thermostat.

The thermostat is for flush mounting in a wall socket. A baseplate for external wall mounting is available.

PRODUCT PROGRAMME

MCC4-1991-UA	Clock-thermostat incl. floor sensor.
MCC4-1999-UA	Clock-thermostat with built-in room sensor.
MCD4-1999-UA	Clock-thermostat with 2 sensors. Floor sensor and built-in room sensor.

WARNING – Important Safety Instructions.

Disconnect the power supply before carrying out any installation or maintenance work on this control unit and associated components. This control unit and associated components should only be installed by a competent person (i.e. a qualified electrician). Electrical installation must be in accordance with appropriate statutory regulations.

MOUNTING OF SENSOR

The floor sensor contains a safety extra-low voltage (SELV) circuit, allowing it to be placed as close to the floor surface as necessary without having to take account of the risk of shock should the sensor cable become damaged. The two wires from the sensor to the mounting box, must be additionally insulated, e.g. shrink flex. To prevent loose cables from the fixed installation from coming into contact with the terminal block for the floor sensor, they must be restrained using cable ties.

It is recommended that the cable and sensor be placed in a non-conductive installation pipe embedded in the floor (fig. 3). The end of the pipe must be sealed and the pipe placed as high as possible in the concrete layer. Alternatively, the sensor can be embedded directly in the floor. The sensor cable must be led through a separate pipe or segregated from power cables. The floor sensor must be centred between the heating cable.

The sensor cable may be extended up to 100 m by means of a separate two-core cable. Two vacant wires in a multi-core cable used, for example, to supply current to the floor heating cable must not be used. The switching peaks of such current supply lines may create interference signals that prevent optimum controller function. If a shielded cable is used, the shield must not be connected to earth (PE). The two-core cable must be placed in a separate pipe or segregated from power cables.

MOUNTING OF THERMOSTAT WITH BUILT-IN SENSOR

The room sensor is used for comfort temperature regulation in rooms. The thermostat should be mounted on the wall approx. 1.6 m above the floor in such a way as to allow free air circulation around it. Draughts and direct sunlight or other heat sources must be avoided (fig. 4). No external sensor is connected.

Mounting of thermostat

1. Slide the power button down to Off "0".
2. Release the front cover ONLY by inserting a small screwdriver into the hole on either side of the thermostat (fig. 1).
3. Connect the wires in accordance with the diagram (fig. 2).
4. Mount the thermostat in the wall socket. Please note that the adapter plate is properly clipped on the thermostat.
5. Fit the frame and carefully press the cover onto the thermostat. Ensure that both the power slide button on the cover and the power switch pin are down.

DO NOT open the thermostat by releasing the four fixing clips on the back.

First time settings:

The first time the thermostat is connected, push the power slide button to On "1". Language, time and date must be set using the buttons:

1. Set language
2. Set time
3. Set date

PROGRAMMING

See user manual.

FAULT LOCATION

If the sensor is disconnected or short-circuited, the heating system is switched off. The sensor can be checked against the resistance table (fig. 5).

ERROR CODES

- E0: Internal error. The thermostat must be replaced.
- E1: Built-in sensor short-circuited or disconnected.
- E2: External sensor short-circuited or disconnected.
- E5: Overheating, The temperature is too high in the thermostat and switch off the heating.

CE MARKING

According to the following standard:
LVD/EMC: EN 60730-2-9

CLASSIFICATION

The product is a Class II device (enhanced insulation) and must be connected to in the following way:

- Term. 1: Neutral (N)
Term. 2: Phase (L) 230 V ±10%, 50/60 Hz
Term. 3-4: Load, max. 16 A / 3600 W
Term. X: Do not connect
Term. 5-6: External floor sensor

ENVIRONMENT AND RECYCLING

Please help us to protect the environment by disposing of the packaging in accordance with national regulations for waste processing.

RECYCLING OF OBSOLETE APPLIANCES



Appliances with this label must not be disposed of with general household waste. They must be collected separately and disposed of in compliance with local regulations.

TECHNICAL DATA

Voltage	230 VAC ±10% 50 Hz
Max. pre-fuse.....	16 A
Built-in circuit breaker.....	2-pole, 16 A
Output relay	Make contact - SPST - NO
Output	Max. 16 A / 3600 W
Control principle.....	PWM/PI
Stand-by power	0.6 W
Battery backup	5 years
Temperature range.....	+5/+40°C
Limit sensor (OCD4).....	+5/+40°C
Ambient operating temperature.....	+0/+25°C
Control pollution degree	2
Rated impulse voltage	4 kV
Enclosure rating	IP 21
Dimensions	H/84, W/84, D/40 mm
Build-in depth	20 mm
Display	100x64 pixel STN - white backlight
EU Registered Design	001101349-0001/2

The thermostat is maintenance free.

OJ ELECTRONICS A/S

Stenager 13B · DK-6400 Sønderborg
Tel: +45 73 12 13 14 · Fax: +45 73 12 13 13
oj@oj.dk · www.oj.dk

Fig. 1

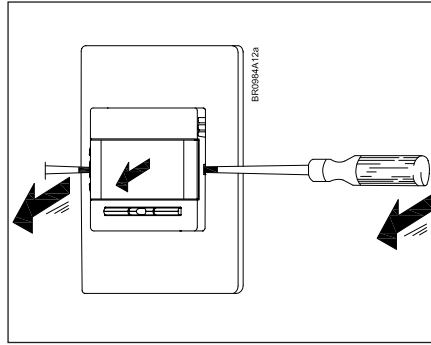


Fig. 2

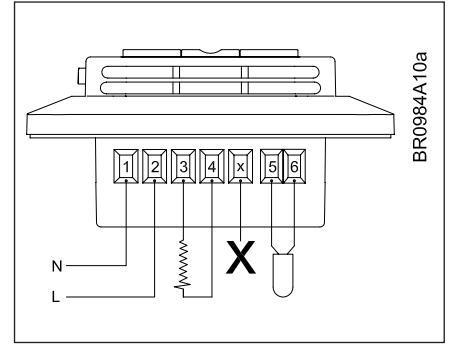


Fig. 3

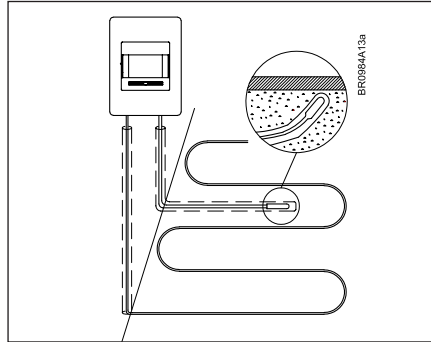


Fig. 4

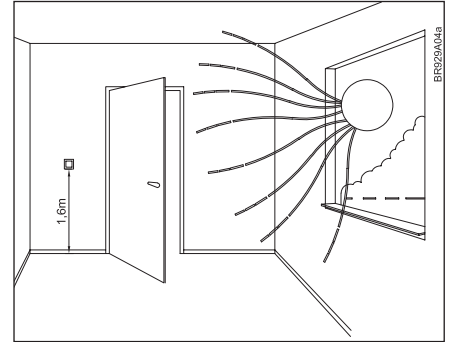


Fig. 5

Sensor		BR0929A08
Temp.(°C)	Value (ohm)	
-10	64000	
0	38000	
10	23300	
20	14800	
30	9700	



67032